



Diagram A
Ai Turbo or Ai Dual Installed as only pump
(Operating in Primary Mode)

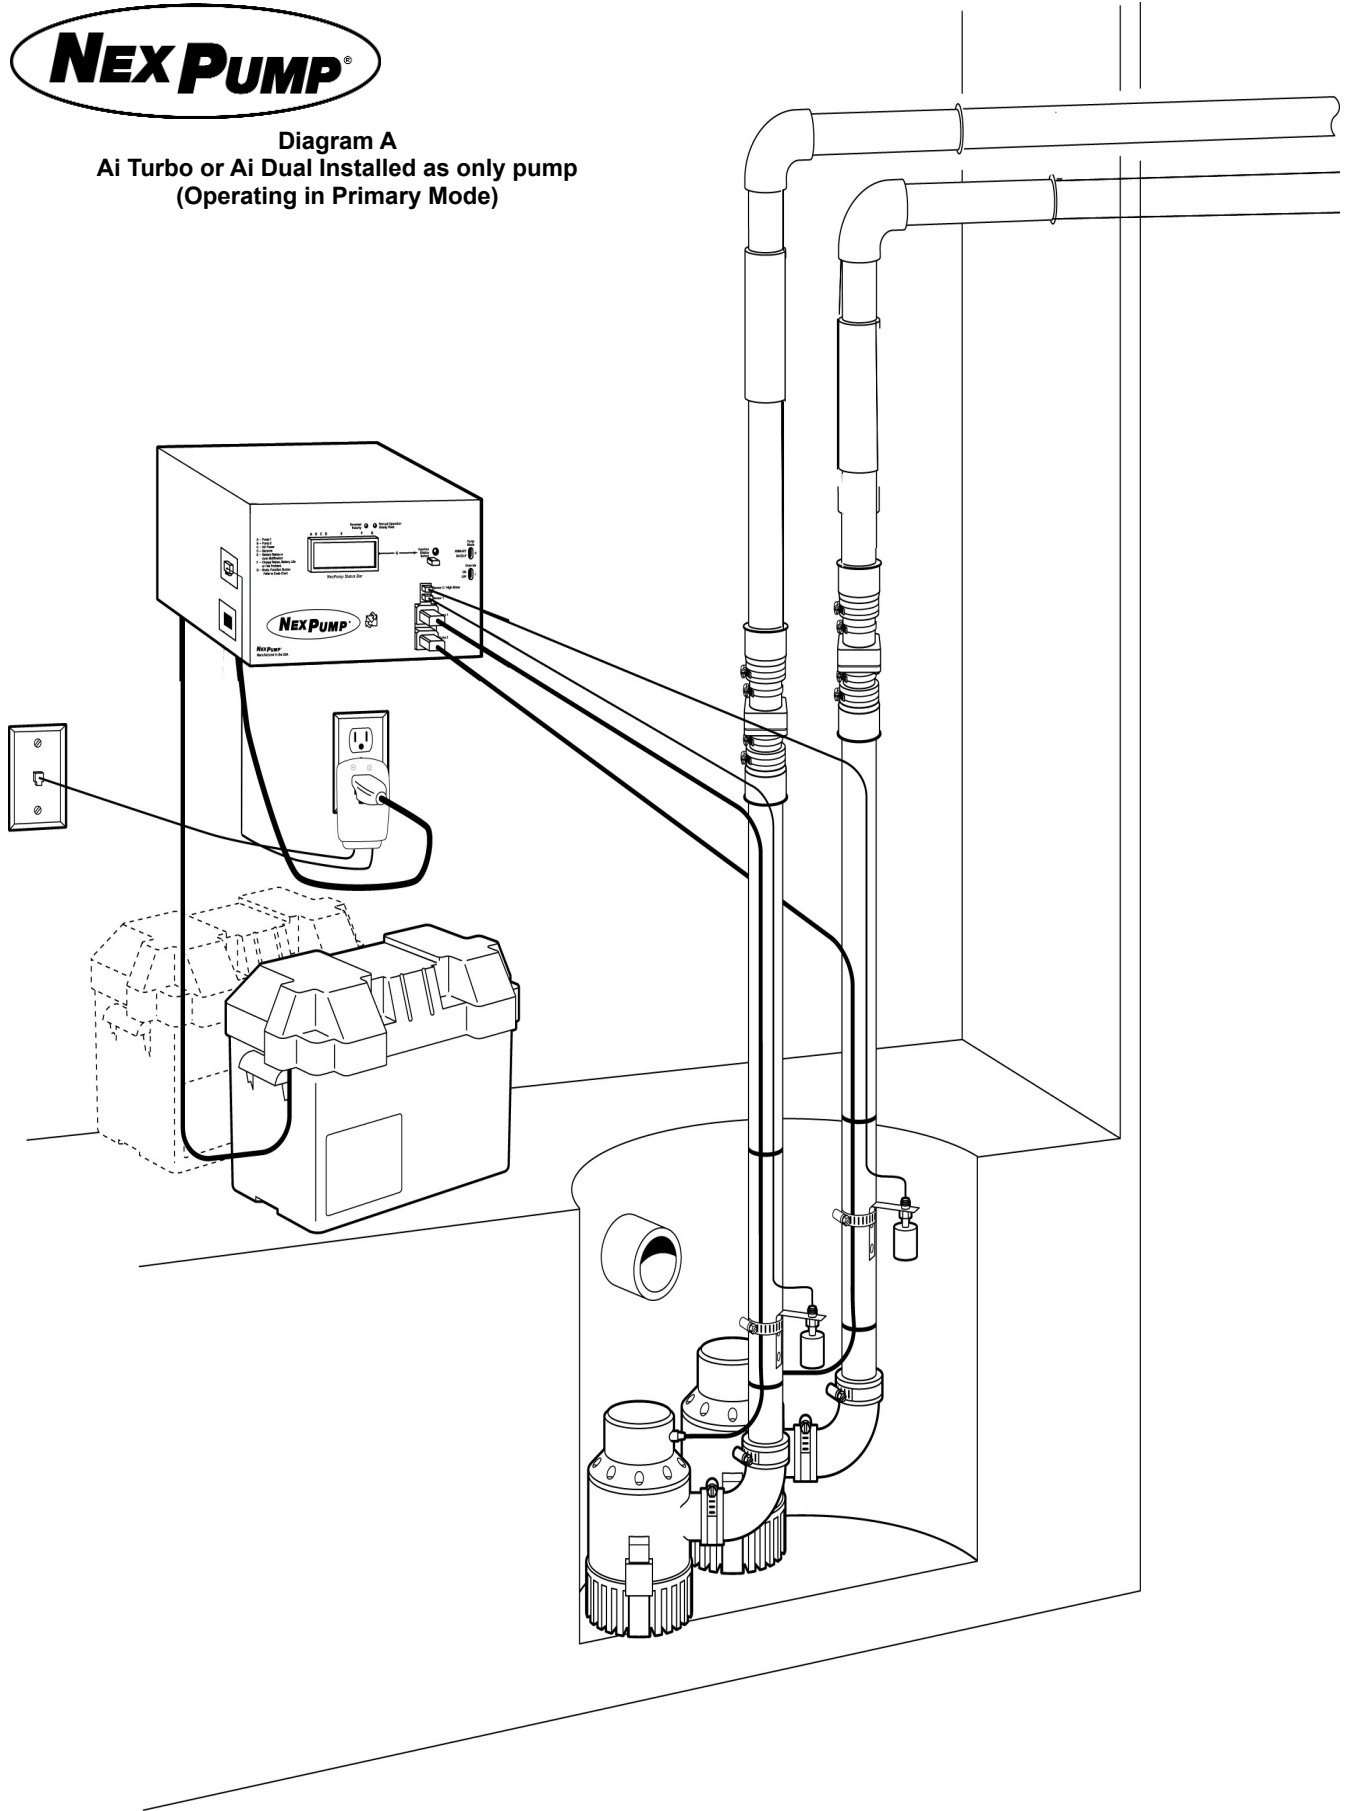




Diagram B
Ai Rage, Ai Turbo or Ai Dual Installed with existing pump
(Operating in Primary or Backup Mode)
(Recommended Configuration)

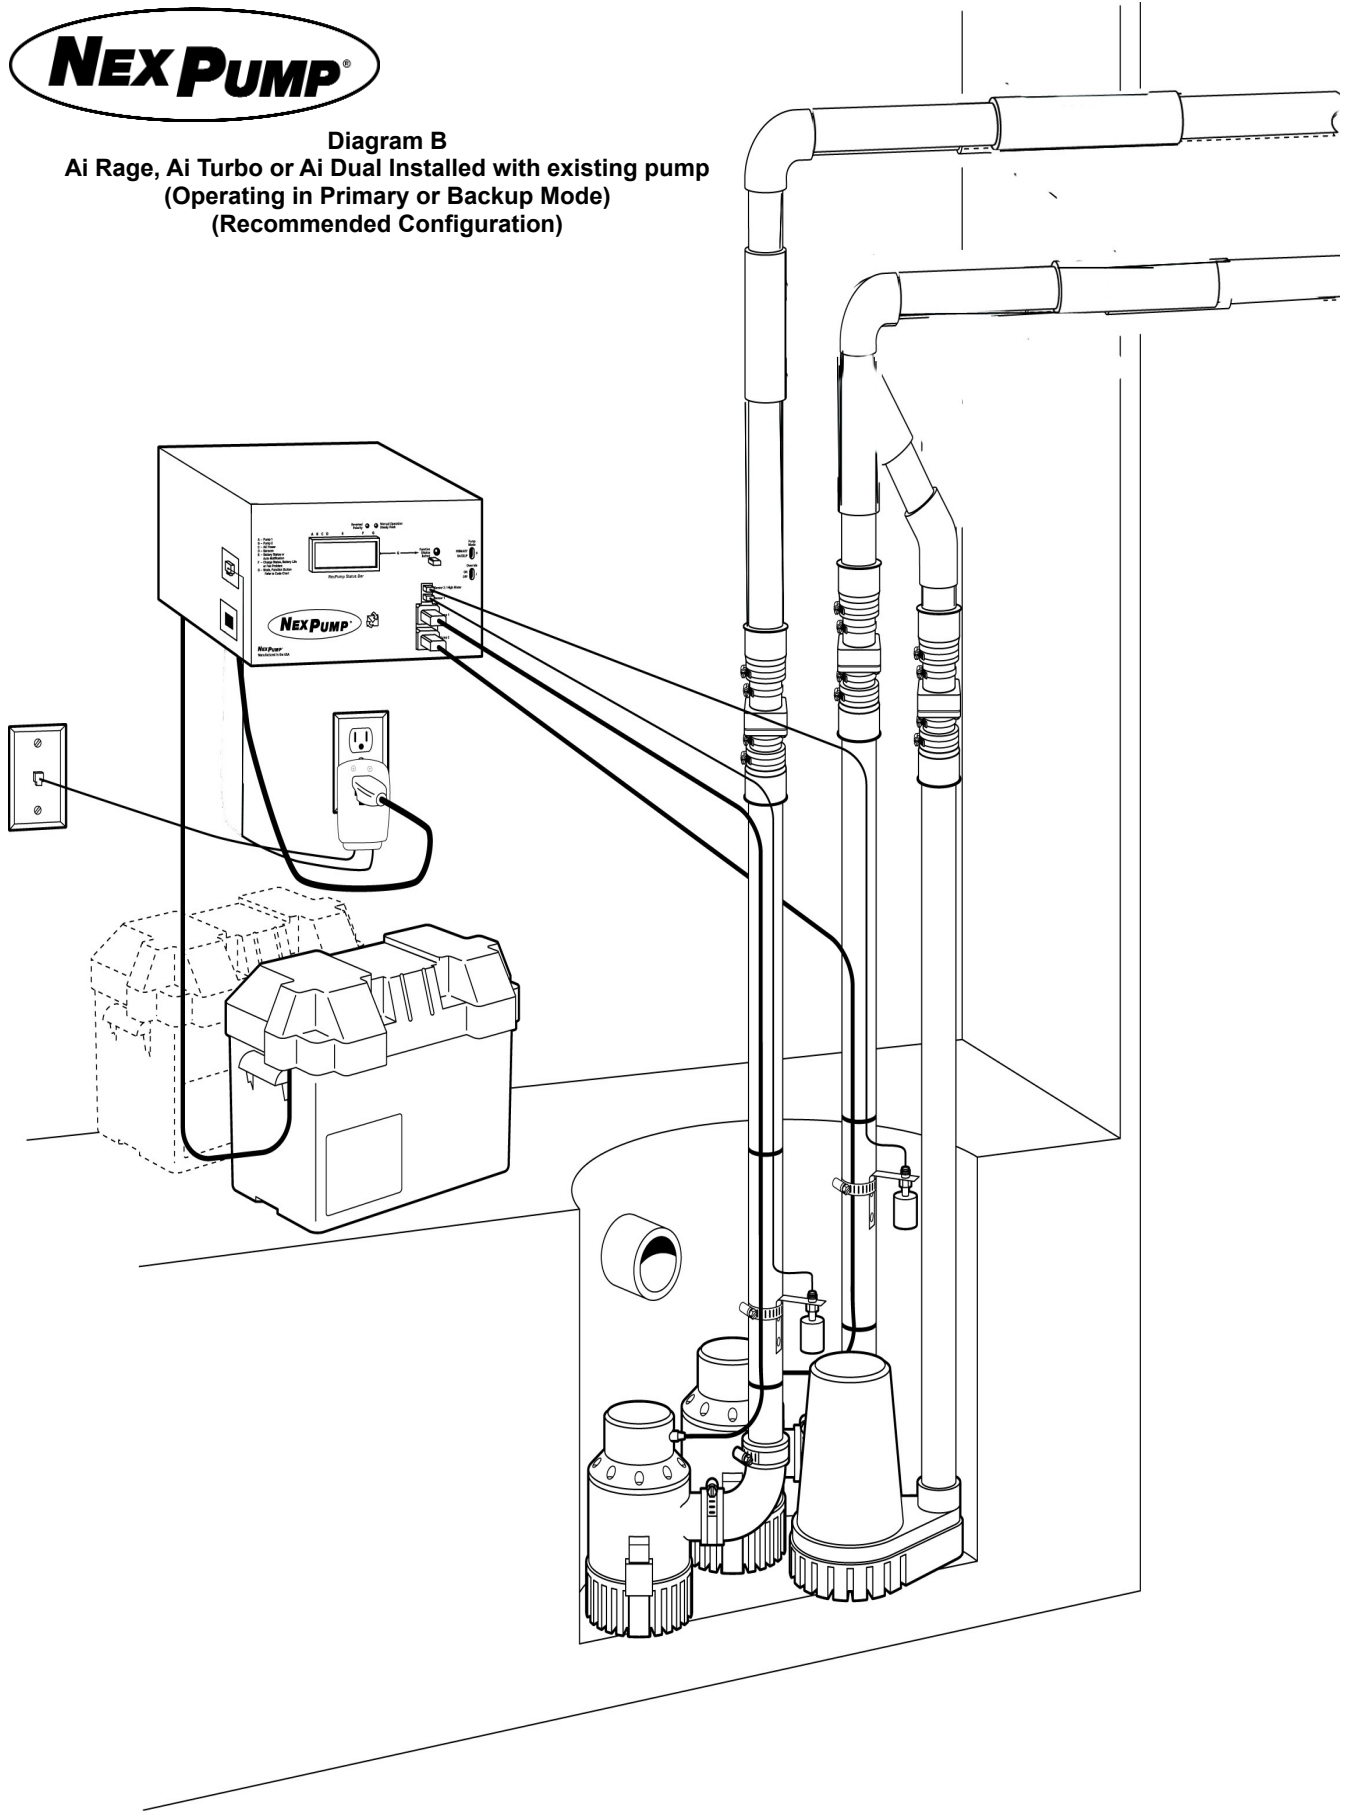




Diagram C
Ai Single or Ai Jet Installed with existing pump
(Operating in Backup Mode ONLY)

